 




ScribblePop - WHAT'S INSIDE:

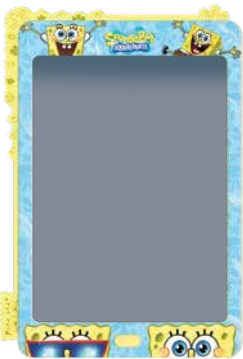

ScribblePop
Tablet



Stylus
Pen



4 Travel-fun
Games



4 Trace & Draw
Templates

GETTING STARTED

Bring SpongeBob and friends to life with your ScribblePop tablet!

Draw, trace characters, play games, solve puzzles and let your imagination run wild!

THIS PRODUCT CONTAINS A BUTTON OR COIN CELL BATTERY.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

 


Compatible battery type - **CR2025 VOLTAGE 3V**

Ensure the batteries are installed correctly according to polarity (+ and -).

- **EVEN USED BATTERIES MAY CAUSE SEVERE INJURY OR DEATH. Remove and immediately recycle or dispose of used batteries** according to local regulations and keep away from children. **DO NOT** dispose of batteries in household trash or incinerate.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Call a local poison control center for treatment information.


GAME TIME! – DIVE INTO THE FUN!

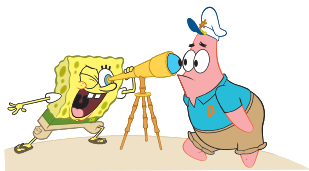

4 FUN TRAVEL GAMES STARRING SPONGEBOB AND FRIENDS!



 TRACE & CREATE YOUR VERY OWN BIKINI BOTTOM MASTERPIECE!

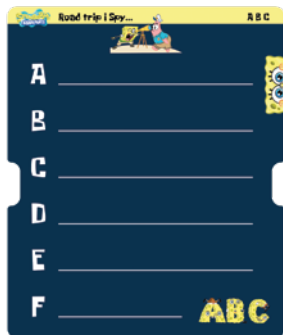

GAME 1: I SPY WITH ABC

Can you spot an Airplane?
or a Bus? For each letter
from A to F, find and write
something you see that
starts with that letter.



GAME 2: VEHICLE HUNT

Look at the busy Bikini
Bottom streets! Count how
many red cars, yellow, blue,
trucks, or boats you can
spot. Don't forget to tally
them up!



GAME 3: CHARACTER COUNT

Can you spot all the fun
things from Bikini Bottom?
Search the pictures in the
frame and find all the
matching objects. Make
sure you count them all!



GAME 4: TRACE THE WORDS

Use your pen to trace each
letter and word on the
screen. Learn new words
while practicing your
writing - Take your time
and follow the lines!



SPONGEBOB



PATRICK STAR



 
**GARY THE SNAIL
& SANDY CHEEKS**



**SQUIDWARD
& SPONGEBOB**

SLIDE IN AN INSERT


Pick one of the game or character drawing cards. Flip the tablet over and slide the card into the back panel with your chosen picture facing down (so it aligns with the screen on the front). Make sure to tuck the insert under all 4 tabs to keep it secure and flat while you draw!

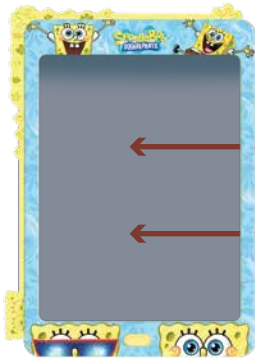


1. Choose a Card



 2. Flip the Tablet, slide the card facing down.

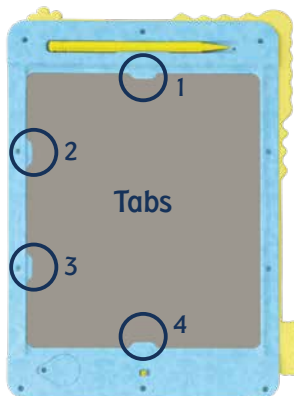

 3. Tuck the insert under all 4 tabs

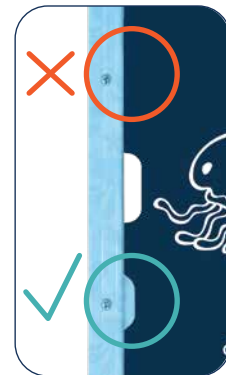

DRAW, TRACE & SCRIBBLE

 
Use the included special pen to draw over the screen. You can trace characters, write your name, play games, or get creative!





ONE-CLICK ERASE



Press the Erase Button on the bottom to clear your drawing instantly and start fresh!

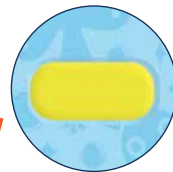

ERASE LOCK FEATURE

Slide the Lock Button on the back of the tablet to protect your drawing from being accidentally erased. You'll see two icons next to the button:

  -  Slide the button to this side to lock the erase function and keep your artwork safe.
-  Slide the button to this side to allow erasing.

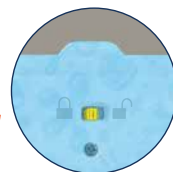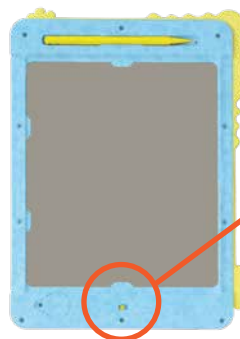


BATTERY INFORMATION

Your ScribblePop tablet comes with the battery already installed and ready to play! The tablet uses very little power, so the battery should last a long time with regular use.

Need to replace the battery? No problem! Just follow these simple steps:

 1. Flip the tablet over and locate the battery cover on the bottom left side.
2. Use a small Phillips screwdriver to open the Cover.
3. Remove the old battery and replace it with a new one.
4. Ensure the battery is installed correctly according to polarity (+ and -).
5. Close the compartment and tighten the screw securely.

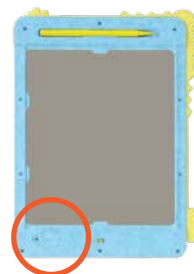

1 x CR2025
voltage 3V



These instructions are designed to provide clear direction for the use and/or assembly of this product. We appreciate your feedback and we're here to help. If any part seems unclear or if the directions do not achieve the desired results, please let us know.

Before leaving any product complaints or bad reviews, please contact our customer service team at - info@jitterygit.com and we'll do all we can to resolve your issue.